



Boost Converter

Enable

Optional Boost Converter Enabled:
Install L1, connect supply across VBAT(TP4,TP5), connect TP1 and TP2 and populate D1 if VP (Output Voltage) > 3.6V

Disable

Optional Boost Converter Disabled:
Connect TP2 to TP3 and TP4 to TP5