



Assembly Instruction: SchmartShield for Through-hole Arduino. Model # 206-0002-01

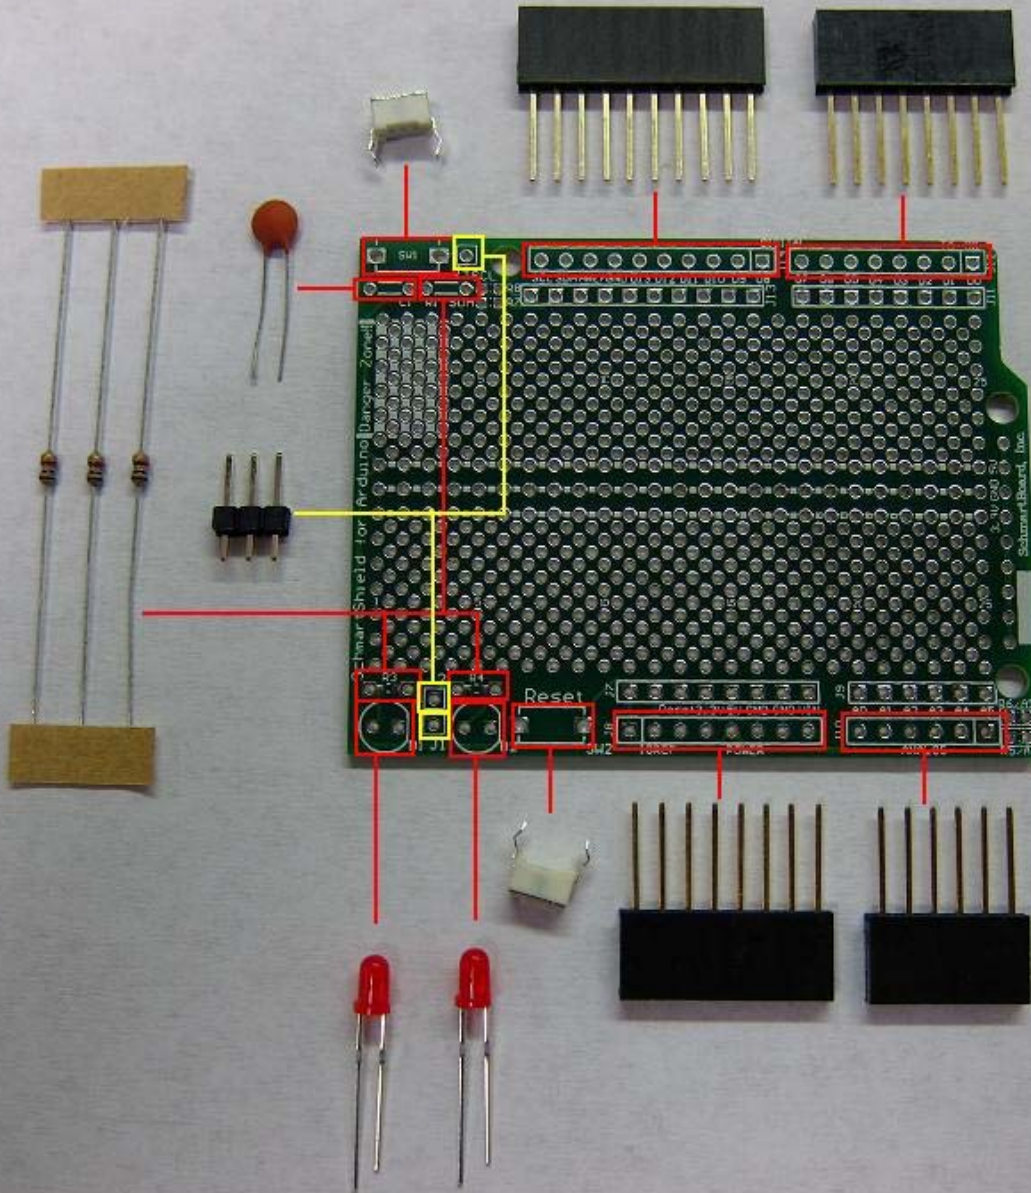

- Note: 1. C1, R1 and SW1 are for optional reset circuit
2. For LEDs, shorter leads go into square plated holes.

Fully Assembled Through-Hole Shield:

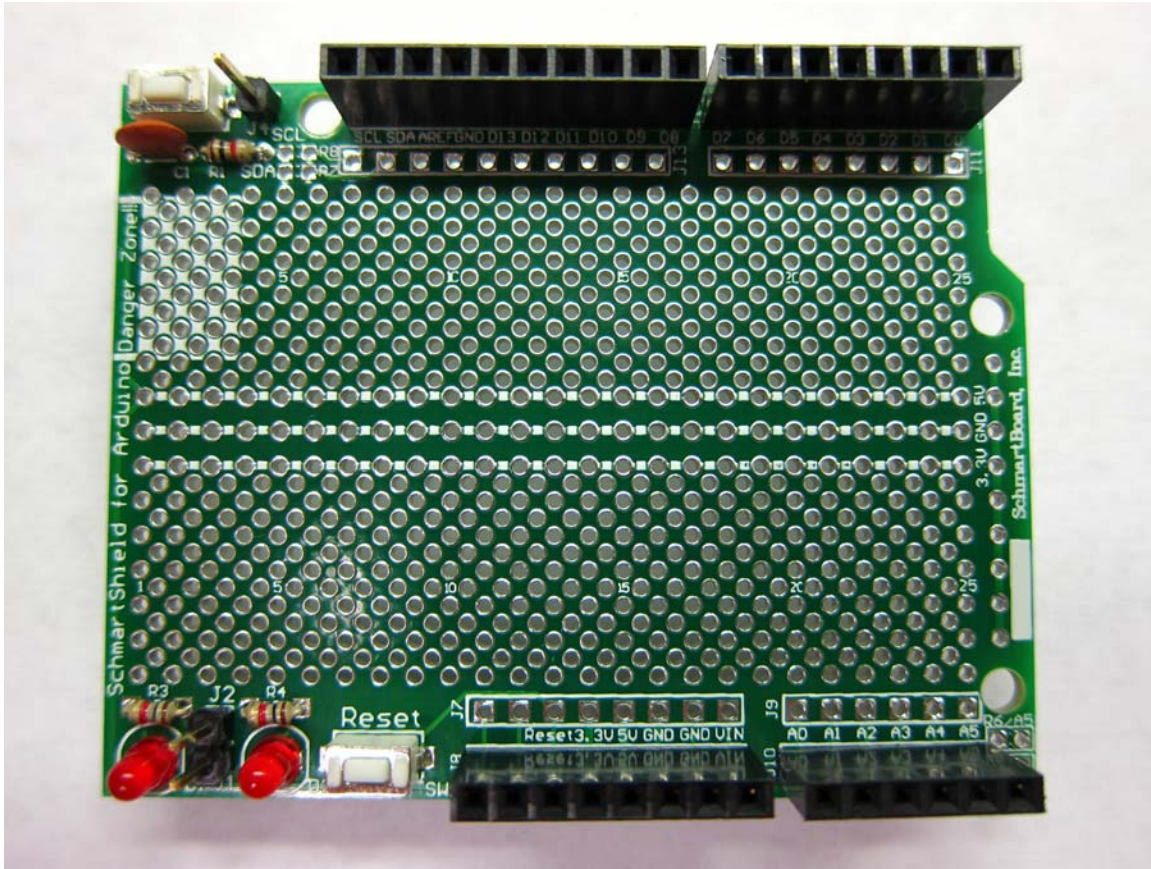

Pull-up resistors locations:

