



Assembly instructions for 206-0001-XX (SchmartShield for Arduino Mega )

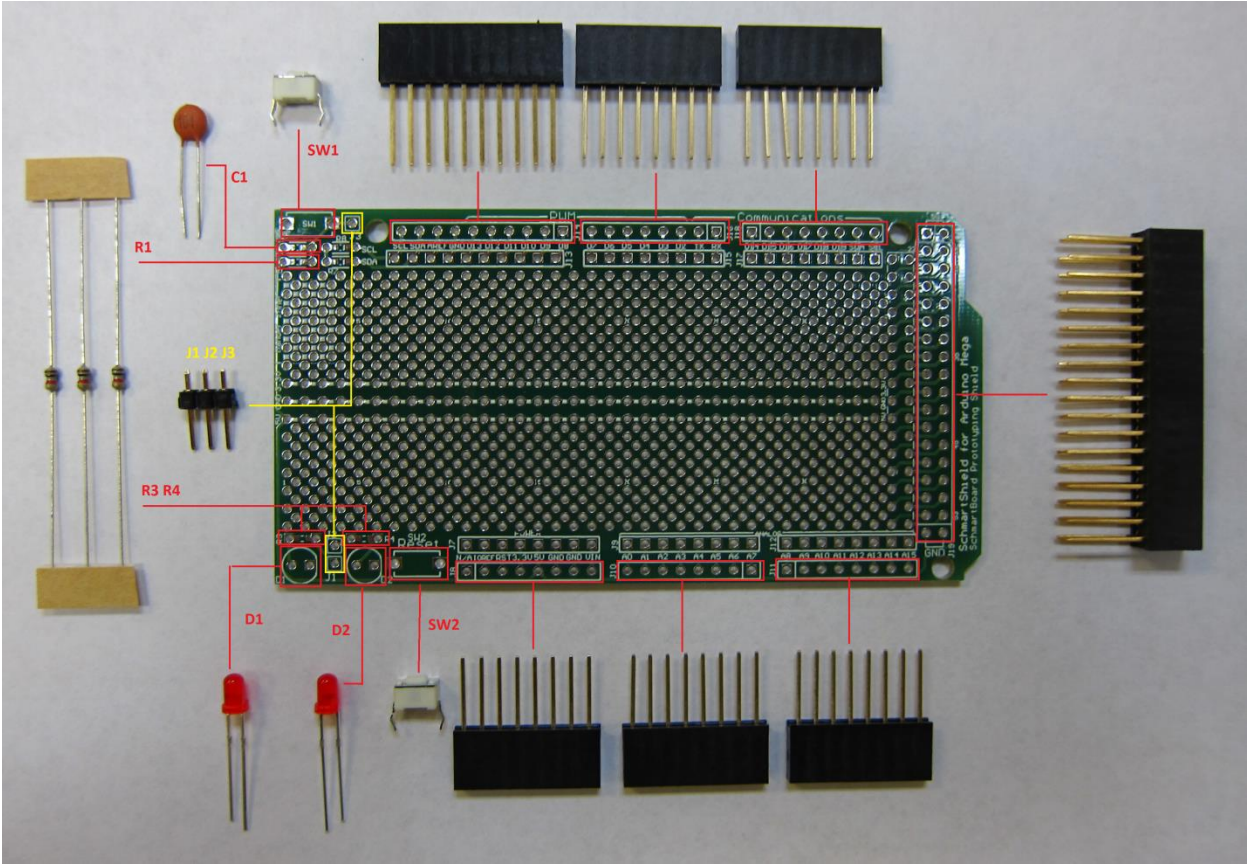

NOTE1: C1, R1 and SW1 are for optional reset circuit

NOTE2: LED polarity – Shorter pins go into square plated holes

Fully Assembled Arduino Mega board

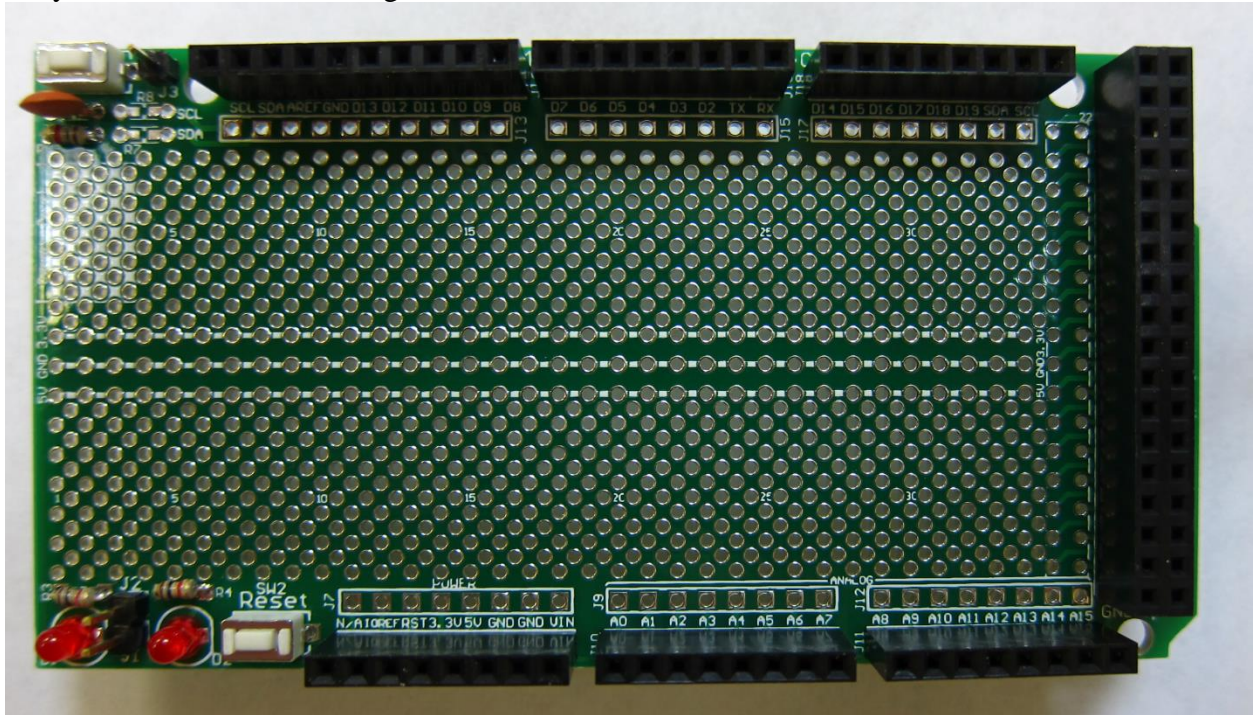

Pull-up resistors for I2C

