



SchmartPatch Instructions

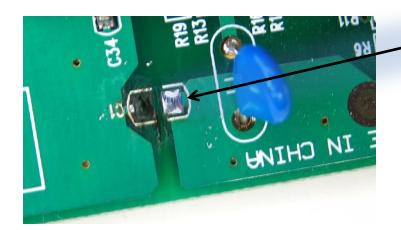


Step 2 - With scissors or a blade, cut off one of the pads from the SchmartPatch. Cutting lines are silk screened on the Schmartpatch for your convenience.

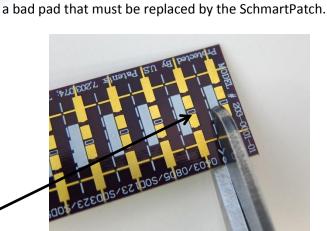



Step 1 – Find the location on the PCB that you need to replace or add a component. The photo on the left shows

Step 3 – Pull back the paper on the back of your SchmartPatch to expose the adhesive backing

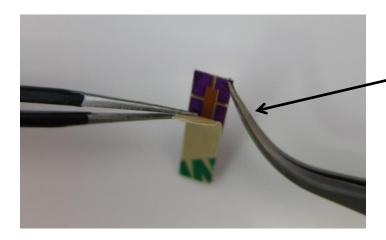


Step 4 – Adhere the SchmartPatch to your circuit

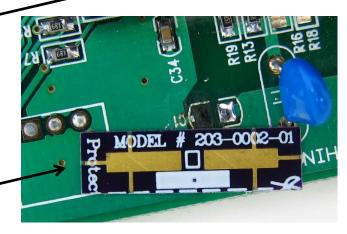

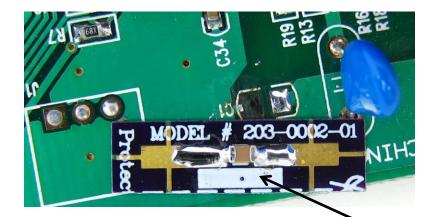

Step 4 – Solder your component to the SchmartPatch

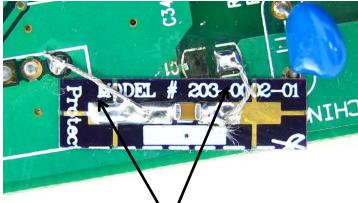

Step 5 – Add jumper wires from the SchmartPatch to the correct points on your PCB.